




BOYI Joker 61 Wired Mechanical Keyboard

Quick Start Guide

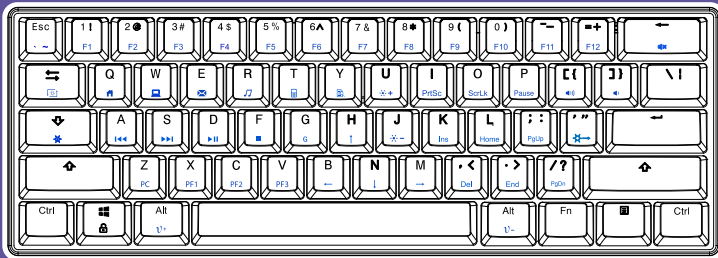

FN Key Combination Guide

Key Combination	Function	Key Combination	Function
	Press and hold for 3s to restore factory settings		F11
	~		F12
	~		Mute/Unmute
	F1		Cycle through 14 lighting effects
	F2		Home
	F3		My Computer
	F4		Mail
	F5		Music (Default system application: Windows Media Player)
	F6		Calculator
	F7		Search
	F8		Light brightness increases from 0% to 20% to 40% to 60% to 80% to 100%, the white LEDs on the CAPS and WIN keys will flash
	F9		Light brightness decreases from 100% to 80% to 60% to 40% to 20% to 0%, the white LEDs on the CAPS and WIN keys will flash.
	F10		PrtSc

Key Combination	Function	Key Combination	Function
	Scr LK (After pressing FN+, in an Excel spreadsheet, use the arrow keys to navigate between pages; press FN+ again, and in an Excel spreadsheet, the arrow keys will move to the next line)		
	Pause		PF1 Mode: In this mode, the X key's white light remains on
	Volume +		PF2 Mode: In this mode, the C key's white light remains on
	Volume -		PF3 Mode: In this mode, the V key's white light remains on
	Backlight recording: While this operation is in progress, the Caps Lock and Windows keys will remain lit, and the keyboard will be disabled. Once recording is complete, the backlight will return to its pre-recording state.		Left Arrow
	Previous Track		Down Arrow
	Next Track		Right Arrow
	Play/Pause		Del
	Stop		End
	Enter Game Mode (lights up); W, A, S, D keys light up (customizable)		Page Down
	Up Arrow Key		Lock/Unlock Windows and apps; enabled by default (when locked, the Win key's white LED stays on; when unlocked, the lighting syncs with the backlight)
	Insert		Increase backlight speed (adjustable in 5 steps; at maximum, the Caps Lock and Win keys' white LEDs flash 3 times. Default speed is approximately 80%)
	Home		Decrease backlight speed (adjustable in 5 steps; at maximum, the Caps Lock and Windows keys' white lights flash 3 times. Default speed is approximately 80%)
	Page Up		

Steps for Recording with Backlight

1. First, press FN+G to enter game backlight mode: the A, S, D, and W keys will light up.
2. Press FN+Caps Lock; the Caps Lock and Windows key indicator lights will remain white, indicating entry into recording mode.
3. To record an LED, press FN+, then click the LED you want to activate. {Color guide: First press = red; second press = orange; third press = yellow; fourth press = green; Fifth press = Cyan; Sixth press = Blue; Seventh press = Purple; Eighth press = White; Ninth press = No color (cancel multi-backlight selection). The Esc key also displays a corresponding color indicator}
4. Repeat step 3 to program other LEDs
5. After programming is complete, press FN+Caps Lock again to save the programmed lighting (replacing the previous default backlight)
6. Press FN+G to switch from backlight mode to gaming mode (lights on); press FN+TAB to switch back to backlight mode

Product Parameters

- Keyboard Size: Length 11.2 *Width 3.9 *Height 0.7 inches
- Keyboard Weight: 1.2 lb
- Connection Method: Type-C Wired
- Number of Keys: 61 Keys
- Backlight: Full-keyboard individual RGB lighting
- Working Current: 250 mA
- Working Voltage: 4.5-5.5 V
- Compatible System: Windows/Android/Linux/IOS (Multimedia shortcut keys, driver compatible with Windows only)
- Warranty: 1 Year

BOYI Official Driver Download Website:

<https://www.boyikeyboard.com/Download.html>

If you have any questions please feel free to contact us at the mailbox:
boyiservice2020@163.com