

User Manual  Thank you for purchasing C75 Pro tri-mode mechanical keyboard. We hope you will be satisfied with our products and services. The functions and operation of this product will be described in detail below.

	Three-position toggle switch:
	Left-Bluetooth mode
F 2.4G	Center-Wired mode / power of
	Right-2.4G mode

Plug the USB cable into the keyboard and toggle the switch to the center "C position to enter wired mode.

After the keyboard is turned on, press FN+1/2/3 to enter Bluetooth mode, press FN+1/2/3 combination key for 3S, the keyboard enters into the code state, the red/blue/yellow indicator light flashes fast; After connecting the indicator light is always on 2S, if not connected to the indicator light off, the keyboard into sleep mode.

keyboard enters sleep mode.

After the keyboard is turned on, press FN+4 to enter 2.4G mode, then pres combination key for 3s to enter pairing mode, insert the receiver, the indicate will flash fast, exit pairing after pairing is successful, the mode light is alway After 30s not finding the paired device, exit pairing mode light goes out and

## Indicator Light Descriptio

			Indicator Position	Connect Back	Pairing	Connect Successf
	Fn+1	BT1:	Num1	Red Slow Flash	Red Flash	Red light always on 2s
	Fn+2	BT2:	Num2	Blue Slow Flash	Blue Flash	Blue light always on 2
	Fn+3	BT3:	Num3	Yellow Slow Flash	Yellow Flash	Yellow light always on
	Fn+4	2.4G:	Num4	Green Slow Flash	Green Flash	Green light always on 2
"OFF"	Fn+5	Wired:	Num5	No	No	White light always on 2

, long le pairing			Н		Indicator Light Position	Indication Method
ne device	싷	Mac O		System Indicator	Individual Indicator Light 1	Blue light is always on
		Cap		Caps	Individual Indicator Light 2	Blue light is always on
ess FN+4 icator light vays on	싳	0		Lock WIN	Individual Indicator Light 3	Blue light is always on
nd the	Н	′	MP.	Charging	Individual Indicator Light 3	Blue light is always on

1. 18+4 types of light effects;

4. Speed: default 4 speeds, factory 4th speed;

1. Speed: Default 4 speeds, factory 4th speed;

Brightness: default 5 speeds, factory highest brightness.

Brightness: Default 5 speeds, factory highest brightness.

Windows

Switch backlight effect

Switch backlight color

Backlight brightness +

Backlight brightness -

Backlight speed -

Backlight speed +

Backlight brightness -

Backlight speed -

Backlight speed +

different composite keys;

Key Combination

FN+Pgdn

FN+Pgup

2. Light effect sequence can be adjusted, can be reduced, can be assigned to

			Indicator Position	Connect Back	Pairing	Connect Succe
	Fn+1	BT1:	Num1	Red Slow Flash	Red Flash	Red light always o
	Fn+2	BT2:	Num2	Blue Slow Flash	Blue Flash	Blue light always
	Fn+3	BT3:	Num3	Yellow Slow Flash	Yellow Flash	Yellow light always
	Fn+4	2.4G:	Num4	Green Slow Flash	Green Flash	Green light always
F"	Fn+5	Wired:	Num5	No	No	White light always

## 3. All light effect support 3 kinds of color mode: fixed monochrome, custom Brightness+ monochrome, full-colored color, partially support direction switching; Win+tab Fn+F4 Win+E Fn+F5 Fn+F6 Home page Previous Song Previous Song Play/Pause Play/Pause Next Next Mute Mute FN+DEL Turn on/off light/Power saving mode Turn on/off light/Power saving mode Volume-Volume-Switch backlight effect Volume + Volume + Switch backlight color Backlight brightness + Short press to toggle Bluetooth 3, long press Bluetooth 3 pairing long press Bluetooth 3 pairing

Fn+4

Fn+L\_Win

Key Combination Windows Fn+Esc Long press 3s to restore factory settings Long press 3s to restore factory settings 0 0 keys light up to show the power percentage. Brightness-Brightness-Task Control Console Home page

Short press to switch to 2.4G, Short press to switch to 2.4G

Switch to wired mode

Lock WIN button

Fn+BackSpace Check battery level (Battery power is valid in wireless mode) Check battery level (Battery power is valid in wireless mode)

long press to pair with 2.4G. long press to pair with 2.4G.

Switch to wired mode

1. FN+short press the scroll knob: scroll up and down the knob to adjust the multimedia volume, press the knob to switch the lighting mode directly.

Adjust light mode



Adjust volume

P. FN+Long press scroll knob 3s: adjust the screen content by scroll knob control press the scroll knob for determining the selected option.

Press the key combination Fn+Backspace, the backlight is off, the number keys 1

or example, if 1 is on, it means 10% power, if 1 and 2 are on, it means 20% power.

creen control, press down on the scroll knob to switch between Win/Mac systems.

corresponding items according to the corresponding keys.

# LED Light Test

Method 1: Press and hold the L\_Ctrl key to power up and enter the light check mode. All lights are lit for 30s and return to normal mode.

Method 2: You can enter the LED light test through PC software.

• The driver corresponds to 3 configuration layers and 1 FN customization layer.

Method 1: Long press ESC+L\_Ctrl key to power on and enter RF test mode

Key 1: Low Frequency; Key 2: Medium Frequency; Key 3: High Frequency; BOYI Official Website:

Key 7: Single Carrier; Key 8: FCC; Key 9: Data Test Mode; Re-power on to restore www.boyikeyboard.com

• Method 2: You can enter RF test mode through PC software, and then test the Thank you for purchasing our BOYI C75 Pro Mechanical Keyboard! Our BOYI C75 Pro Mechanical Keyboard comes with 1 year warranty

Dear Customer,

boyiservice2020@163.com

https://www.boyikeyboard.com/Download.html

**BOYl Customer Service E-mail Address:** 

except for human damage. We are happy to serve you, if you have any

# questions or concerns, please do not hesitate to contact us via email:

(boyiservice2020@163.com) for a solution and we will do our best to help you. For more information about BOYI series keyboards, please

visit BOYI Official Web: (https://www.boyikeyboard.com/).

We hope you enjoy our BOYI keyboards! We look forward to your next

**BOYI Service** 

## **BOYI C75 Pro Mechanical Keyboard Download Website:**

1. Warranty period: 12 months from the dateof purchase 2. The following conditions are not covered bythe free warranty

a. The whole machine or parts of the producthave exceeded the warranty period

b. Improper operation and man-made damage

c. Failure and damage caused by disassemblyof electronic parts

Due to the particularity of the battery, remember not to use sharp objects or

Date of purchase: \_\_\_\_\_years \_\_\_ month \_\_\_ day

Problem Description during product use:

d. Failure and damage caused by natural disasters and other force majeure factors

ardobjects to pokeand disassemble the battery, so as not to causeharm to the

Warranty card

Purchase channel:\_\_\_\_\_

Date of repair: \_\_\_\_\_years \_\_\_ month \_\_\_day Customer information:

Addressee: \_\_\_\_\_ Contact number:\_\_\_\_\_ Address information:



Keyboard Model: BOYI C75 Pro Mechanical Keyboard Number of Keys: 81 Keys+Knob+Screen Connectivity: Wired / Bluetooth / 2.4G Wireless Connection Compatible OS: Mac / Windows / Android Size: 13.5x5.8x1 inches

Warranty: 1 Year